

CELLPHONE DETECTOR **WOLFHOUND PRO**

User's manual version 1.5



Table of Contents

Contents.....	2
INTRODUCTION.....	4
Items Supplied.....	5
Wolfhound-PRO UNIT DESCRIPTION.....	6
Organic Light Emitting Diode (OLED).....	7
Higher-Level Menu Screens.....	8
MAIN MENU Screen (highest-level menu)	8
MEASUREMENTS Screen	9
Phone Detection Mode	9
Direction Finding Mode.....	12
Frequency Discriminator Mode.....	14
Direction Finding Scale	14
Threshold Marker Setting.....	15
Reset Max Bars	16
DECT 6.0 Detection Mode	16
SETUP	17
Antenna Connection.....	17
Attachment of Omnidirectional Antenna.....	18
Attachment of Direction Finding (DF) Antenna.....	18
Activating Accessories (Sound/Vibrator/Laser).....	19
Adjusting Volume	20
Selecting Frequency Band	21
Adding Attenuation (if necessary)	21

Information Screen.....	22
Loading Default Parameters.....	23
OPERATION & USE	23
Resetting the Maximum-Hold Marker.....	23
Antennas	24
General Guidelines for Good Signal Reception	25
Monitoring Cell Phone Use in Real-Time.....	25
Monitoring Coarse Scale Maximum Hold.....	25
Using Wolfhound-PRO Unit with the Omnidirectional Antenna	25
Using the Wolfhound-PRO Unit with the Direction Finding (DF) Antenna.....	25
Method 1: Maximizing Signal Along the Same LOP	27
Method 2: “Triangulate” with Two (or more) LOPs	28
MAINTENANCE and TROUBLESHOOTING	29
Charging Batteries	29
Appendix 1: Synopsis for the optional Wolfhound-PRO PC Software.....	30
Wolfhound-PRO Windows Software.....	31
Introduction.....	31
Installation of Software.....	31
Getting Started.....	31
Realtime.....	33
Statistics.....	34
Settings.....	35
Help.....	38

INTRODUCTION

The Wolfhound-PRO cell detector uses a narrow-band/high-selectivity receiver controlled by an on-board processor. The Wolfhound-PRO receiver has a resolution bandwidth of 4 MHz and uses a square-law detector. The receiver can be set to scan multiple up-link frequency bands assigned to North America, the European Union, Asia and Australia, as listed in Table 1:

Air Interface Technology	Up-Link Frequency Band (MHz)
North America	
LTE Uplink	698 – 716 MHz
	777 – 787 MHz
	788 – 798 MHz
GSM-850, GSM-900, CDMA, Cellular	824 – 849 MHz
	896 – 901 MHz
AWS Uplink	1710 – 1755 MHz
PCS	1850 - 1910 MHz
DECT 6.0	1920 – 1930 MHz
GPS Tracking Devices (GSM)	850/900/1800/1900 MHz
Europe/Asia/Korea/Australia/Brazil/New Zealand/Israel/Canada/Japan	
EGSM-900 Europe, Asia, Australia, New Zealand	880 – 915 MHz
GSM 1800 (DCS-1800) Europe, Asia, Japan	1710.2 - 1784.8 MHz
WCDMA/UMTS Europe, Asia, Korea, Japan, Australia, Brazil, New Zealand	1920 – 1980 MHz

The receiver detector output is used to drive one or more of the following indicators:

1. height of coarse and fine bar charts in the OLED display
2. pulsing rate of Laser (optional accessory mounted on DF antenna assembly)
3. pulsing rate of Sound Alert (speaker or ear bud)
4. turning on Vibrator Alert (fixed rate)

The Wolfhound-PRO unit is normally used in the hand-held mode either with an Omnidirectional antenna for cell phone detection only (see left side of Figure 1 below), or with a Direction Finding (DF) antenna for identifying the relative orientation (i.e. Line Of Position) of a radiating cell phone. Either antenna is connected to the Wolfhound-PRO unit RF coaxial port located at the OLED end of the unit as it can be observed from the two photos in Figure 1.



Figure 1. Wolfhound-PRO Unit may be used with the Omnidirectional or Direction Finding (DF) Antenna

Items Supplied

The standard package (as shipped) includes the Wolfhound-PRO unit and accessories, including a carrying case as seen in Figure 2:

- Wolfhound-PRO Cell Detector unit
- Operators manual
- VELCRO hand strap
- Ear bud
- External AC Power Charger
- Omnidirectional monopole antenna
- Direction Finding (DF) Antenna assembly
- Mini USB cable
- Pelican® briefcase (black with secure lock and keys)



Figure 2. Wolfhound-PRO unit and accessories

Optionally, the following items are also available:

- Green Laser module (mounted on DF antenna assembly)
- PC Software package (for real-time monitoring, data logging and report generation)¹

¹ See Appendix 1 below for a synopsis of the functions performed by this software.

Wolfhound-PRO UNIT DESCRIPTION

Photographs of the Wolfhound-PRO unit appear in Figure 3. The unit has an OLED, a trackball, five electrical interfaces and an LED as listed below (see also arrows 1, 2, 3, 6, 7 and 8 in Figure 3):

1. Antenna port
2. Audio (ear bud) jack
3. DC Power jack
4. Liquid Crystal Display (OLED)
5. Trackball (roll for 2D cursor navigation/press down for selecting)
6. Laser jack
7. Mini USB jack
8. Battery status LED (Red)



Figure 3. The Wolfhound-PRO Unit, Controls, Indicators and Interfaces

Organic Light Emitting Diode (OLED)

The Wolfhound-PRO unit can be turned on by holding down the trackball (see arrow 5 in Figure 3) at least for about a second. When the unit is powered, the amber monochrome OLED will display one of the three measurement screens (Phone Detection, Direction Finding or DECT 6.0 Detection) from which the unit was turned off. Thus, if the unit was being used in the Direction Finding mode just before powering off, next time it is powered on the OLED will display the Direction Finding screen in Figure 4:

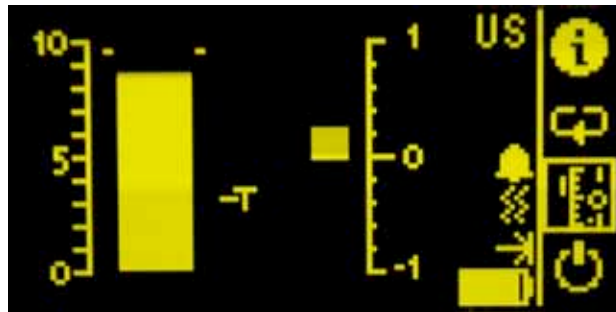



Figure 4. OLED displaying the Direction Finding Screen

The unit can be powered off only from one of the three measurement screens, by pressing the trackball on the power icon in Figure 4 (the power icon is nearest to the lower right-hand-corner of all three measurement screens).

Higher-Level Menu Screens

MAIN MENU Screen (highest-level menu)

The Wolfhound-PRO unit MAIN MENU screen (see Figure 5) is accessed by clicking the trackball on the

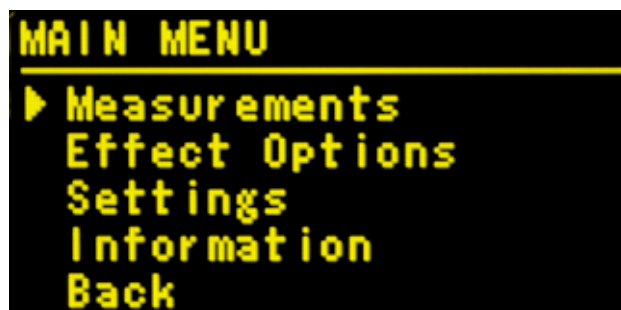

information icon “i” from any one of the three measurement screens (see Figure 4).

Figure 5. MAIN MENU Screen

Clicking “Back” in Figure 5 or in any other screen where “Back” appears will take the user to the next higher level menu or screen. The first four items in the MAIN MENU (i.e., Measurements, Effect Options, Settings and Information) are discussed next :

MEASUREMENTS Screen

Clicking on “Measurements” from the MAIN MENU (Figure 5) will yield the MEASUREMENTS Menu:

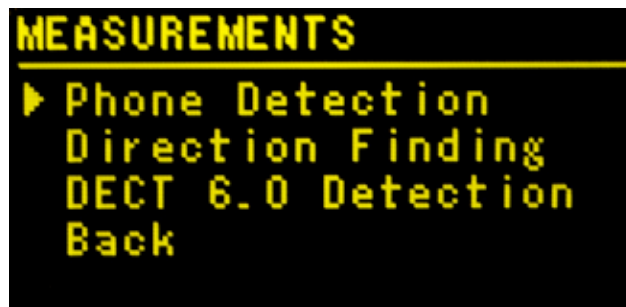


Figure 6. MEASUREMENTS Menu Screen

This menu allows the user to enter one of the three modes of real-time monitoring of the Wolfhound-PRO unit:

Phone Detection Mode

In this mode (see Figure 7), the Wolfhound-PRO will detect the use of one or more cell phones while monitoring the relative strength of the source signal(s) and frequencies using the Omnidirectional antenna. The frequency band needs to be selected via the BAND SELECTION screen. The frequency indication corresponds to the strongest signal detected in the selected frequency band, using a coarse bar-chart varying in height on a relative scale of 0 to 10. Each division on the coarse scale corresponds to approximately 6.4dB change in signal level. In this mode cell phone use can be detected but direction of maximum signal strength cannot be determined.



Figure 7. Phone Detection Mode

Typical Screen

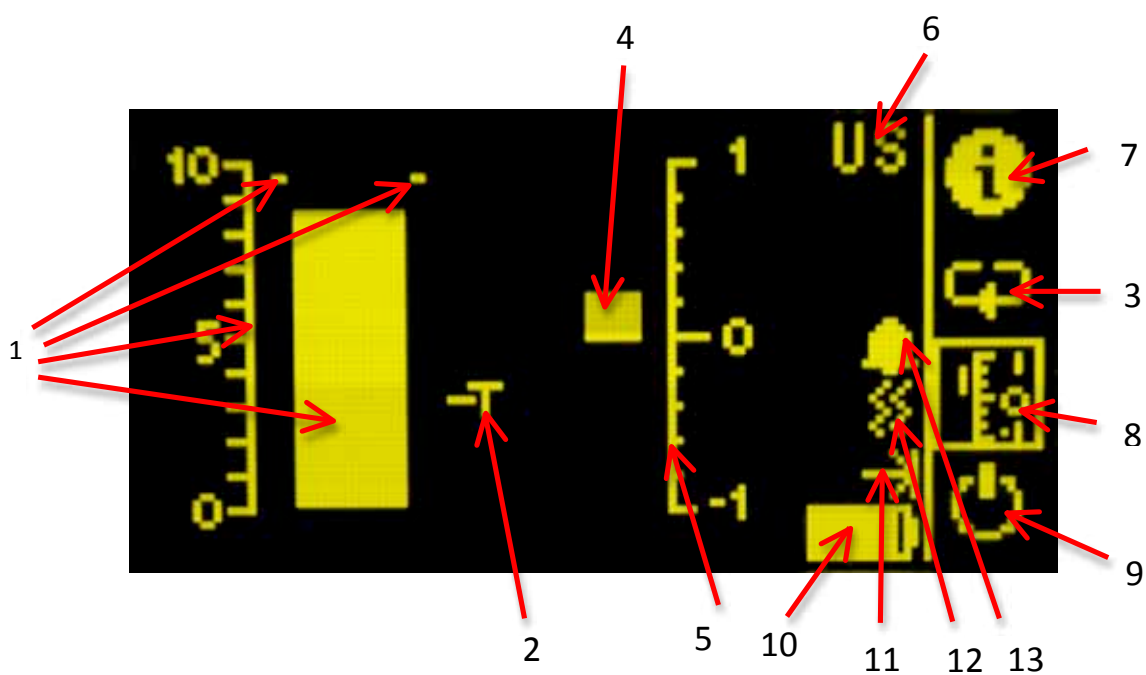


Figure 8. Typical Screen Icons

The screen and icons shown is the typical Direction Finding screen but shares many functions and icons of most other measurement screens in the Wolfhound-PRO.

- 1 **Coarse Bar Chart:** Indicates instantaneous signal strength on a scale of 0 to 10. Maximum hold indication provided by the two dashes at each side of bar-chart.
- 2 **Threshold Setting marker:** Threshold setting is adjusted by pressing the ball down on the “T” icon on the right (see Figure 13), then rolling the ball (up or down) to the desired level with respect to the bar chart scale to the left, then clicking the ball down to lock marker setting. This setting controls both the Frequency Field and Cell Phone icon indicators (arrows 4 and 5).
- 3 **Direction Finding Features Toggle:** This icon will only display when in the Direction Finding selection in the Measurements menu. Selecting this icon and pushing in the trackball will toggle through the following modes: Threshold (T), Reset Maximum Hold (arrow pointing down), Frequency Discriminator Mode (single cellphone), Scan All Mode (3 cell phones), Direction Finding Mode (scale). Once you see the function you like, simply move the trackball down to highlight that icon and push in the button to select that function.
- 4 **Direction Finding Scale:** This vertical scale only appears when Wolfhound-PRO is in the Direction Finding mode. This scale measures signal strength like the scale to the left of it but at a finer resolution making it useful for sensitive direction finding.
- 5 **Cell Phone icon:** This fixed icon turns on when any signal level in the frequency band exceeds the threshold marker setting.
- 6 **Geographic Region:** This field indicates one of multiple possible frequency band settings .
- 7 **Information Icon:** Selecting this icon brings back the MAIN MENU screen
- 8 **Direction Finding Mode:** Selecting this icon puts the Wolfhound-PRO into Direction Finding Mode. The more granular RSSI scale on the right will appear in this mode.
- 9 **Power Off Icon:** The unit is turned off by selecting and pressing the ball down on this icon from any one of the three measurement screens (i.e., Phone Detection, Direction Finding or DECT 6.0 Detection).
- 10 **Battery Status Icon:** This icon indicates the charge status of the internal Lithium Ion Polymer battery. Starting with an almost empty battery, as the unit is charged by the AC charger, this icon will change from an empty rectangle to a solid amber rectangle. If used over 5.5 hours without charging, the unit will eventually turn itself off to avoid permanent damage to the battery. As long as the battery is charging, the battery status LED (red, see arrow 10 in Figure above) will be ON.
- 11 **Laser Pulse Indicator:** This icon shows that the pulsing laser is active and should be visible while a cell phone is detected. Note: it may be difficult to see the green laser pulse in bright

conditions. Try pointing device at a close wall or corner to see laser. NEVER look directly into laser for any reason.

- 12 **Vibrator Icon:** This icon shows that the vibrating alert mode is active so you should feel the Wolfhound-PRO unit vibrating during cell phone detection.
- 13 **Audible Alert Icon:** This icon shows that the audible alert is active so you should hear the Wolfhound-PRO unit beeping during cell phone detection.



Direction Finding Icons

These are icons appear in the direction finding mode and their functions are all useful when performing direction finding:



Select this icon to toggle through the following functions in the Direction Finding Menu:




Select this icon to set Threshold. The  icon will change to  for adjustment. Use the trackball to lower or raise the Threshold. Push the trackball again to select the new level.



Select this icon to reset maximum signal detected bar.



Select this icon to remove the strongest signal from the list of detected phones.

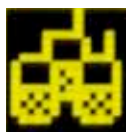

Select this icon to “see” all cell phones detected.



Select this icon to enter the Direction Finding measurement mode.

Direction Finding Modes

This mode of measurement allows the user to determine the Line of Position of a radiating cell phone (or, the direction from which the cell phone is radiating), as well as detecting the cell phone signal (see Figure 9). The frequency band needs to be selected (US, EU, AU,...) via the BAND SELECTION screen.



Figure 9. The Direction Finding Modes

Within the Direction Finding mode there are two different features that allow the user to detect cell phones with greater accuracy. These features can be found by highlighting the spinning wheel icon and pressing on the track ball.

Here are the two different features in the Direction Finding mode followed by a brief description for each one:

Frequency Discriminator Mode:



Figure 9. Frequency Discriminator Mode

The Frequency Discriminator mode allows the user to remove the strongest signal of a cell phone from a particular frequency band. This application is helpful when a known cell phone is detected and needs to be filtered out by the Wolfhound PRO so the user can find other hidden cell phones in the same frequency band. When this mode is activated the band selection will display “-” where the frequency just appeared.

To deactivate the Frequency Discriminator mode highlight the icon shown in figure 11 and press the track ball. The icon shown in figure 12 will appear and the band selection will be displayed.

Frequency Discriminator Mode:



Figure 11. Frequency Discriminator Mode

Direction Finding Scale:

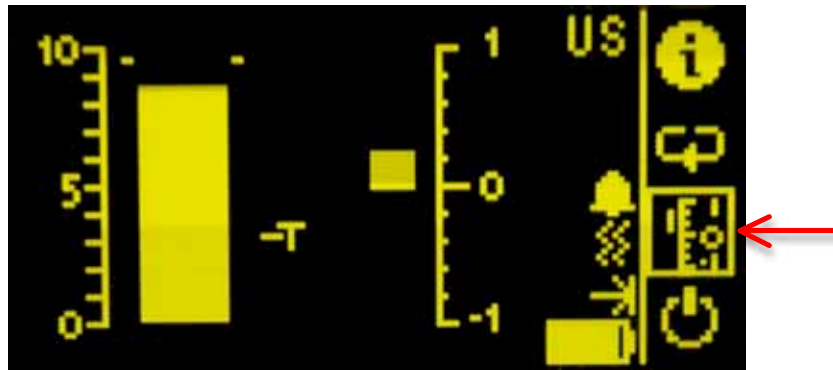


Figure 12. Direction Finding Scale

When the Direction Finding mode is activated, a graph appears allowing the user to see greater granularity of the detected cell phone signal. It is recommended to use this mode with the Direction Finding antenna attached to the Wolfhound PRO to uncover hidden cell phones. As the signal increases or decreases in the graph to the right the user can determine the direction of the cell phone. For more details on setting up the Direction Finding Antenna refer to Attachment of Direction Finding Antenna.

There is also the Threshold Marker and the Reset Max Bars icons that are found using the spinning wheel icon.

Threshold Marker Setting:



Figure 13. Threshold Marker

The Threshold Marker Setting allows the user to set a line anywhere along the scale on the left. Should the Wolfhound-PRO detect a signal that exceeds that threshold, the user will be alerted with one or more alerts (see Activating Accessories for information on this). To change the threshold marker

highlight the T icon and press the track ball. The T icon located near the scale can now be modified up or down using the track ball. Press the track ball again to set the desired level.

Reset Max Bars:



Figure 14. Reset Max Bars

The Reset Max Bars mode is activated when the user highlights the spinning wheel icon and presses the track ball until the down arrow icon appears as shown in Figure 14. Once a cell phone is detected and the bar appears, the markers will move to the maximum level detected and remain there. This mode is helpful when the user is busy while cell phone activity is occurring. To set the markers to zero press the track ball when the down arrow icon is highlighted.

DECT 6.0 Detection Mode

DECT 6.0 cordless phone monitoring is initiated from the MEASUREMENTS screen, regardless of frequency band selection. The various fields in the DECT 6.0 Detection screen are identical to those of the Direction Finding screen with the exception of the Geographic Region field as follows (Figure 7):

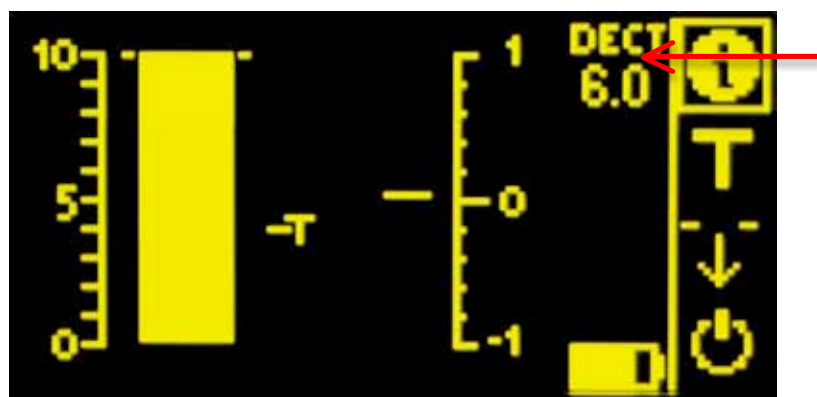


Figure 15. DECT 6.0 Detection Mode

SETUP

Setup of the unit before use requires the completion of the following sequence of steps:

1. attaching one of the provided antennas to the unit as appropriate (Omnidirectional antenna for detecting/monitoring, DF antenna for locating)
2. powering up the unit by pressing the trackball ²
3. activating accessories (Sound, Vibrator, Laser) as needed
4. adjusting Volume (if Sound was activated)
5. selecting the frequency band (US or EU)
6. adding attenuation if necessary (for strong in-band signals)

Each of these steps are discussed in greater detail below:

Antenna Connection

The antenna port (SMA-jack) is located just below the OLED when the unit is held in the normal orientation (arrow (1) in Figure 3). Either one of the two antennas (Omnidirectional or Direction Finding) will interface with this connector, as follows:

Attachment of Omnidirectional Antenna

Simply screw the antenna connector at the base of the antenna to the antenna jack on the unit (see left side of Figure 1).

Attachment of Direction Finding (DF) Antenna

Attaching the DF antenna to the unit is done in three steps, as follows:

- 1) attach bracket to the DF antenna flange using the two thumb screws
- 2) attach the DF antenna assembly RF and Laser connectors to the Antenna and Laser jacks respectively (see (A) left and right sides in Figure 16). **Use of wrench to tighten antenna connector may damage unit. Finger-tight only -- DO NOT use a wrench.**
- 3) secure the Wolfhound-PRO unit to the DF antenna assembly bracket by tightening (finger-tight only) the bracket thumb screw (see (B) in Figure 15).

²

Powering the unit before connecting the antenna should be avoided.

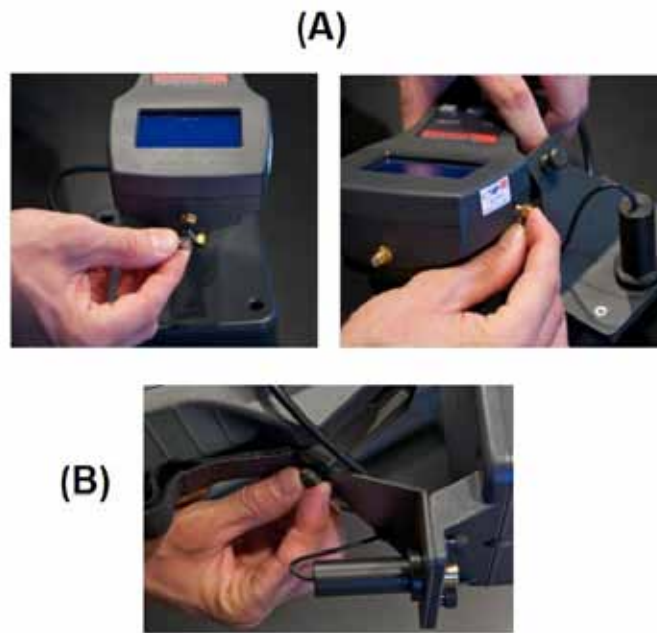


Figure 16. Attaching DF Antenna Assembly Connectors to Antenna and Laser jacks on unit (A); Securing DF Antenna Assembly Bracket to Unit with Thumb-Screw (B)

CAUTION:

The antenna connector should be **hand-tightened only** to the unit SMA port. Use of a wrench for this purpose will result in damage to the unit housing and/or the connector, hence null the product warranty. Application of stress to the DF Antenna should also be avoided to preclude permanent damage to Unit and/or the DF Antenna assembly.

Powering Up Unit

The unit is powered up by pressing down (to click) the trackball for at least 1 second. When powered, the amber monochrome OLED will display one of the three measurement screens (Phone Detection, Direction Finding or DECT 6.0 Detection) from which the unit was turned off the last time it was used.

Activating Accessories (Sound/Vibrator/Laser)

From the MAIN MENU (see Figure 5 above) select “Effect Options” to obtain the EFFECT OPTIONS menu (Figure 17):

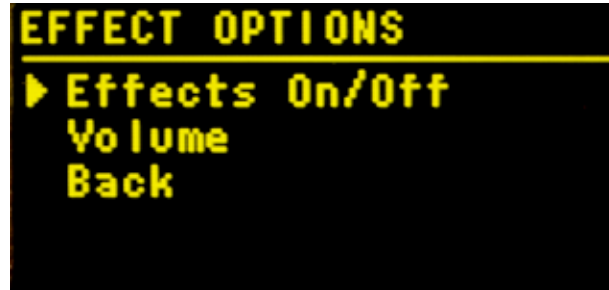


Figure 17. EFFECT OPTIONS menu

Selecting “Effects On/Off” will cause the OLED to display the “EFFECTS ON / OFF” screen seen in Figure



18:

Figure 18. EFFECTS ON / OFF menu

Check the desired fields (Sound, Vibrator, Laser as needed) by clicking the ball, then select “Back” to return to the “EFFECT OPTIONS” screen (Figure 17). The behavior of these accessories as a function of the detected signal strength will be as follows:

Laser: the laser starts pulsing at a constant rate when the signal level exceeds the Threshold level. the duty cycle of the laser pulse increases with increasing signal level but the pulse rate (or period of pulse) stays constant.

Sound: when the signal level exceeds the Threshold level, sound alarm starts beeping. Beeping rate increases with increasing signal level.

Vibrator: the Vibrator alert will go off when signal level exceeds the Threshold level. The vibrator alert will operate intermittently at a constant rate and duty cycle independent of detected signal level, as long as it exceeds the threshold setting.

Adjusting Volume

From the EFFECT OPTIONS menu in Figure 17 select “Volume” to obtain the VOLUME screen (see Figure 19):

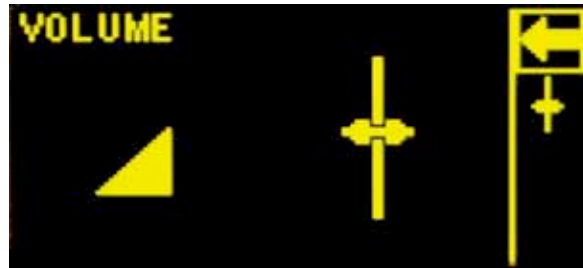


Figure 19. VOLUME screen

Then, follow the sequence:

1. select the second icon from top right hand corner,
2. adjust volume by rolling the ball up/down as desired,
3. push down ball to click
4. return to “EFFECT OPTIONS” screen by clicking on the left-arrow icon at top right corner
5. return to “MAIN MENU” screen by clicking on “Back”

Selecting Frequency Band

Starting from MAIN MENU, select “Settings” to enter the “SETTINGS” screen. Then select “Band Selection” to enter the “BAND SELECTION” screen (Figure 19).



Figure 19. BAND SELECTION screens

Adding Attenuation (if necessary)

The purpose of this screen is to allow the user introduce variable attenuation between the antenna input port and the input to the receiver to avoid overloading the highly sensitive receiver. This can be encountered when the Wolfhound-PRO unit is deployed near cell towers or other in-band RF sources. To do this, select “Settings” from the MAIN MENU screen to get the “SETTINGS” screen, then select “Attenuation” to enter the ATTENUATION screen (see Figure 20):



Figure 20. ATTENUATION screen (set to ~ 10dB)

The attenuation level is adjusted by clicking on the second icon from the upper right corner in Figure 20, then rolling the ball to move the “elevator” up to increase attenuation while simultaneously observing the signal level decreasing on the coarse bar chart and scale on the left side of the screen. The number immediately to the right of the elevator icon represents the approximate level of attenuation in dB as it is varied over the interval of 0 to 30. The maximum attenuation attainable in this manner is ~ 30 dB, corresponding to about 5 divisions on the coarse signal scale.

Information Screen

The Information screen provides crucial information about the Wolfhound-PRO unit battery status and the unit firmware version. To access this screen, select “information” from the MAIN MENU to produce the INFORMATION screen seen in Figure 21:



Figure 21. INFORMATION screen

When the first menu item (Battery Status) is clicked, it will produce the BATTERY STATUS screen with unit-specific time-dependent battery information as seen in Figure 22:



Figure 22. BATTERY STATUS screen

When the second menu item (Product Info) is clicked, the PRODUCT INFO screen appears with the unit's firmware version and serial number (see Figure 23):

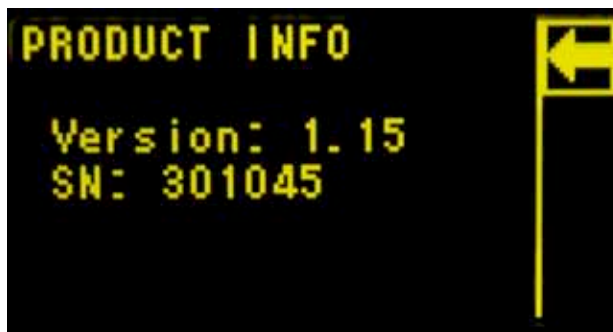


Figure 23. PRODUCT INFO screen (representative)

On the actual PRODUCT INFO screen of the unit, the “SN:” characters shall be followed by the six-digit serial number of the unit appearing on the serial number label (with the BVS logo) pasted to the side of the unit.

Both of these screens (Figures 22 and 23) are exited by clicking on the left-arrow icon on the top right corner of the screens.

Loading Default Parameters

When the unit is powered up it will recall parameter values (signal threshold level, attenuation, volume, all accessories off, US frequency bands, Phone Detection mode) used before it was turned off. However, at any time the user can re-load default parameters (i.e., parameter values set by BVS before the unit was shipped to the customer) to the Wolfhound-PRO unit by selecting and clicking on “Load Defaults” in the SETTINGS screen (Figure 24):

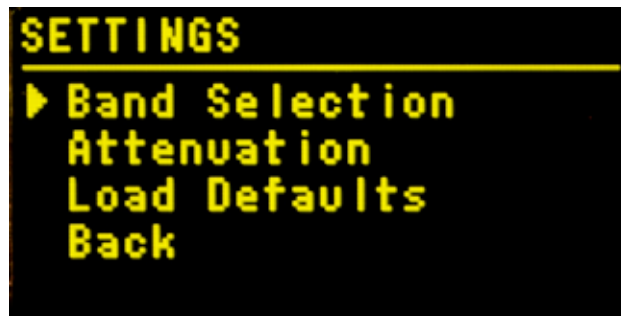


Figure 24. selecting “Load Defaults” from the SETTINGS screen

OPERATION & USE

The Wolfhound-PRO unit is turned on by pressing and holding down the trackball by at least one second. The unit is turned off by clicking on the power-off icon in any one of the following four screens:

1. Phone Detection screen (Figure 7)
2. Direction Finding screen (Figure 8)
3. DECT 6.0 detection screen (Figure 14)
4. BATTERY STATUS screen (Figure 22)

The power-off icon is located at the right-hand lower corner of each of these screens.

Resetting the Maximum-Hold Marker

While in any one of the three monitoring modes (Phone Detection, Direction Finding or DECT 6.0 Detection), clicking on the down arrow icon “-↓-” (the third icon from top on the right-hand side of screen) will reset the maximum-hold marker “- -” (i.e., two dashes one on each side of coarse bar-chart) to the instantaneous signal level on the coarse bar chart. In the absence of a detected signal, the maximum-hold marker will typically be set to the ambient noise floor level. Generally, the maximum-hold marker is very useful for identifying azimuthal antenna orientations yielding maximum signal strength (see section entitled “Using the Wolfhound-PRO unit with the Direction Finding (DF) Antenna”).

Antennas

The Wolfhound-PRO unit comes with an Omni-directional antenna and a Direction Finding (DF) antenna assembly with integral pulsed green Laser.

The Omnidirectional antenna is a monopole, multi-band antenna. When it is oriented vertically (i.e., tip of monopole pointing straight up) the Omnidirectional antenna will detect signals with uniform sensitivity around 360 azimuth degrees in the horizontal plane. Since this antenna will detect RF signals incident from any direction in the horizontal plane with uniform sensitivity, the user cannot distinguish the azimuth angle of the RF source.

The Direction Finding antenna will help identify the orientation of cell phones transmitting RF power in multiple bands (see Table 1 above). The DF antenna output will be maximum when the imaginary line connecting the antenna to the source is approximately perpendicular to the plane defined by the flat face of the DF antenna panel. Sources falling to the rear of the plane of the DF antenna panel will produce substantially diminished antenna output. To help the user maintain proper orientation of the DF antenna, a pulsed green Laser is integrated into the DF antenna. The Laser is mounted on the lower flange of the DF antenna assembly. The duty cycle of the pulsed Laser increases with increasing level of the detected signal.

General Guidelines for Good Signal Reception

The Wolfhound-PRO unit should be kept at about waist to head height from the floor, and away from walls and obstructions for proper performance. For the same reason, keep the Wolfhound-PRO unit at least one foot (but preferably more) away from large metal obstructions or surfaces (i.e., reflecting metal walls, heavy steel structural elements, metal-wire screens, etc.). The unit should not be used while its antenna (either kind) is contained by bags or enclosures made of metal, carbon or other RF energy absorbing or shielding materials; doing so will seriously degrade its performance. These criteria are listed in Table 2 below:

Table 1. General Criteria for Good Signal Reception

Keep unit away from large conducting surfaces which tend to short out tangential component of electric fields (this includes the human body).
The unit should have 360 degree unobstructed view in the region of space being monitored.
Avoid enclosing unit in other objects, in particular objects with conducting or energy dissipating surfaces

Monitoring Cell Phone Use in Real-Time

For real-time monitoring of cell phone use, observe the Coarse and Sensitive bar charts in the OLED Monitoring screen (see arrows (2), (5) in Figure 4).

Monitoring Coarse Scale Maximum Hold

The Coarse Scale Maximum Hold marker (see arrows 1 in Figure 7, 8 or 14) represents the maximum observed level of the detector output signal since the last re-set of the Coarse Scale Maximum Hold marker register. The Coarse Scale Maximum Hold register can be re-set to the noise level at any time while in the OLED Monitoring screen, by pressing the “-↓-” button (arrow 8 in Figures 7, 8 and 14).

Using Wolfhound-PRO Unit with the Omnidirectional Antenna

To detect and monitor the existence of powered-on cell phones in a confined space, place the Wolfhound-PRO unit at about waist to head height from the floor, away from walls and obstructions. For best performance, the Omnidirectional antenna should be oriented vertical (tip of antenna pointing to ceiling or up) with respect to the floor plane .

Using the Wolfhound-PRO Unit with the Direction Finding (DF) Antenna

The DF antenna enables the user to determine the direction in the horizontal (or floor) plane along which the detected signal is maximum. When it is practical or appropriate, the Green Laser (mounted on the DF Antenna assembly) may be deployed for assisting the user for aiming the DF antenna to potential sources. The imaginary line along which the signal is maximum is called a *Line of Position*. After an initial Line Of Position (LOP) is established by a 360 degree sweep of the unit/DF antenna, the user takes a few steps in the LOP direction and then re-confirms the new LOP orientation by sweeping the unit/DF antenna back and forth about the initial LOP (see Figure 25), while observing the receiver output on the more sensitive DF Scale. **When the unit is oriented along the LOP, the DF bar chart will always indicate a positive reading between 0 and 1.** A negative reading on the DF bar chart (between 0 and -1) means that the unit is not oriented along the local LOP.

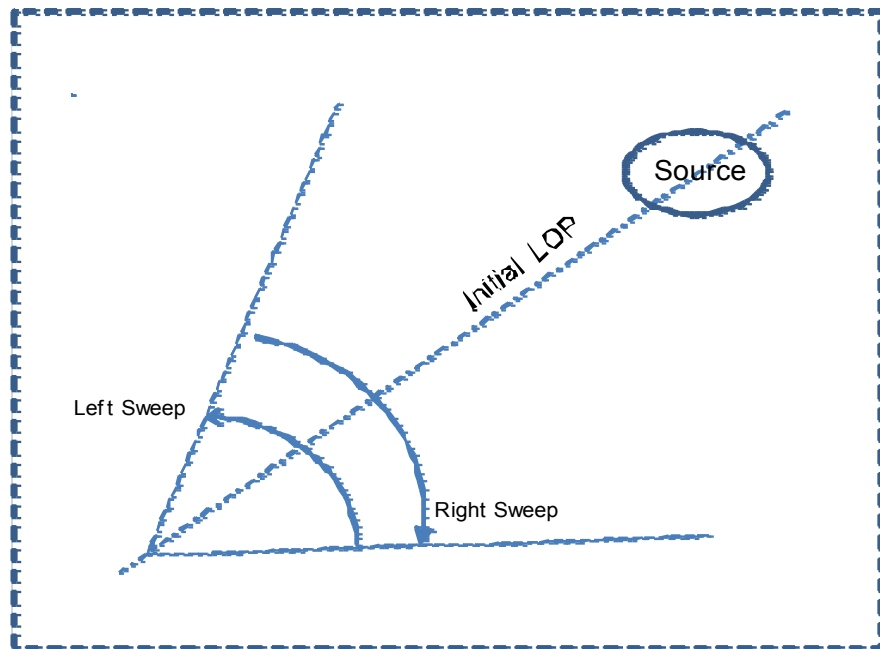


Figure 25. LOP Continually Re-Confirmed About Initial Orientation

Once the initial LOP is determined, sources can quickly be located using one of the following two methods:

Method 1: Maximizing Signal Along the Same LOP

This method is based on approaching the source along the same LOP (see Figure 21) to maximize receiver output at successive points towards the source.

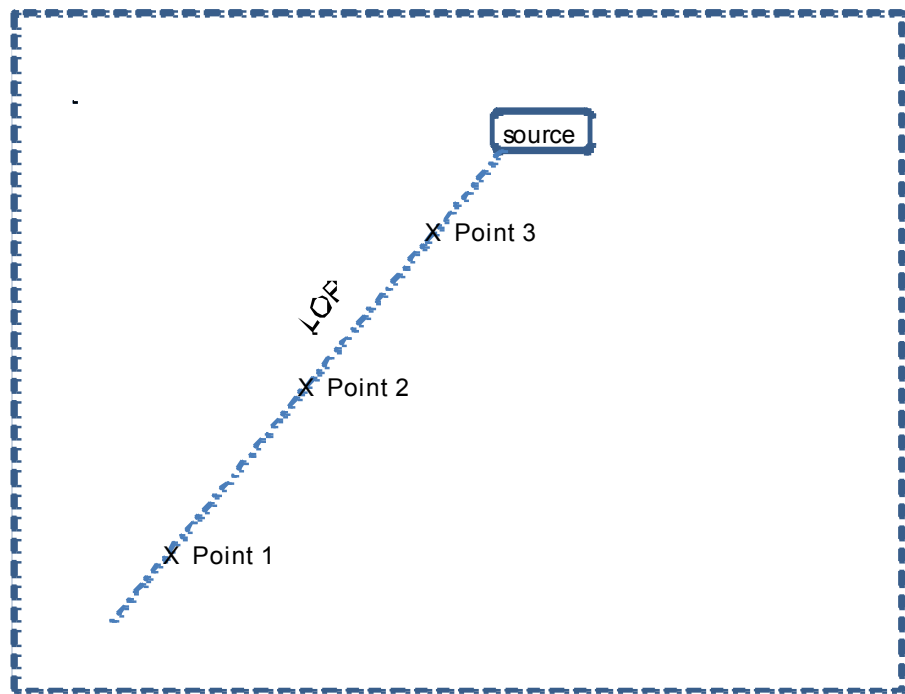


Figure 26. Method 1: Pursuing Source Along the Same LOP

For Method 1 use the following sequence:

1. Keep the DF antenna level by observing the height of the point at which the laser beam reflects from a wall or other object (or keep the laser beam parallel to the horizontal or floor plane).
2. Sweep the DF antenna in the azimuthal direction, from side to side within an arc of about 90 degrees (i.e., 45 degrees to right, then 45 degrees to left, and repeat...) to determine relative direction for maximum detector output on the DF bar-chart (see arrows 4 and 5 in Figures 8 and 9).
3. While the DF antenna is pointing at the potential source, re-set the Coarse Scale Maximum Hold marker by pressing the “-↓-” button (arrows 1 in Figures 8 and 14). This will make the DF bar-chart read maximum level (i.e. 0 to +1 on the DF Scale”) to help the user make small adjustments to his/her intermediate heading to “lock-in” on the actual orientation of the source.

4. Walking slowly in the same heading, scan the unit again for maximum signal in the same manner, while the signal level registered on the coarse bar chart increases.
5. Keep walking in the same direction and repeat Steps 3 and 4 for increased signal till the source is within arm's reach of the Wolfhound-PRO.

Method 2: “Triangulate” with Two (or more) LOPs

This method helps the user rapidly “triangulate” the approximate location of source by determining two (or more) LOPs of the source from two (or more) positions on the floor (see Figure 27).

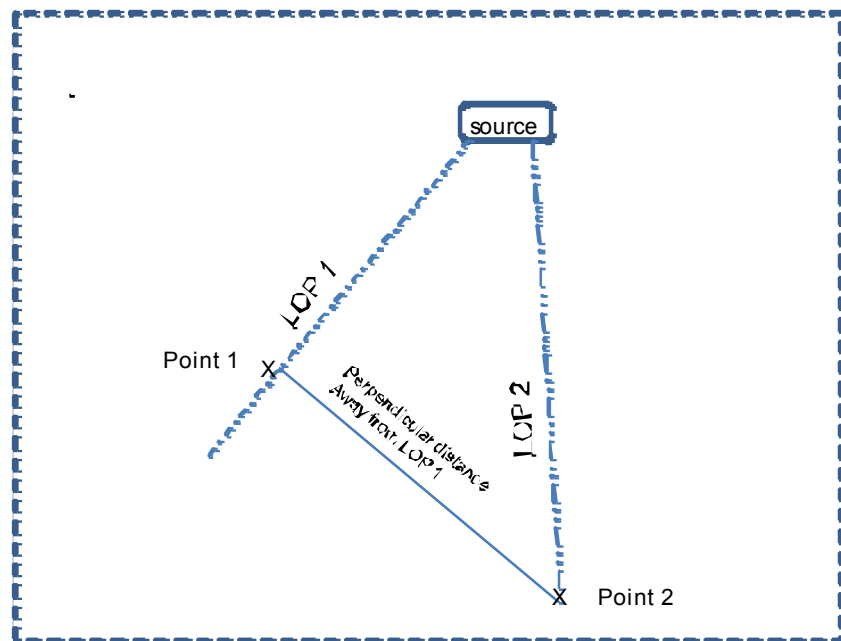


Figure 27. “Triangulating” the Source on Two LOPs

Once the approximate location is known, Method 1 can be used to “zoom-in” on the source, by maximizing receiver signal level. The following sequence is used:

1. Choose Point 1 and determine LOP1

2. Move away from LOP 1 in the perpendicular direction to Point 2 without getting too close to obstructions and/or walls. At Point 2 determine LOP2.
3. Mentally determine approximate area of intersection for LOP1 and LOP2 within the space monitored.
4. Move to point of intersection (of LOP1 and LOP2) and use Method 1 to zoom-in on the source, if necessary.

MAINTENANCE and TROUBLESHOOTING

Charging Batteries

The unit batteries are charged by attaching the AC Adapter/Charger output plug to the DC in jack on the unit. Starting with fully depleted batteries (i.e., after the unit has turned itself off), the Battery Status gauge in the Monitoring screen (see arrow 10 in Figure 7 above) will show “full” (i.e., solid amber rectangle) in about 3.5 hours using the AC Adapter/Charger. As long as the battery is charging, the Battery Status LED (see arrow 8 in Figure 3 above) will be ON.

Appendix 1: Synopsis for the optional Wolfhound-PRO PC Software

At a high level, this software allows the Wolfhound-PRO unit outputs to be displayed and monitored on a PC or Laptop screen in real-time, by performing the following functions:

- Receives data from Wolfhound-PRO via mini USB port.
- Real-Time monitoring.
- Alerts when activity is detected above a set threshold.
- Reports power level, and at what frequency the alert was triggered.
- Alert drops when power falls below drop threshold.
- Displays registration, text message, and call alerts.
- Logs data to a SQL database.
- Reports can be generated from historical data for activity patterns.
- Reports can be printed directly.

The detailed user manual for this software is included in the Wolfhound-PRO PC Software package available as an optional item.

WolfHound Pro Windows Software


Introduction

The WolfHound Pro is a hand-held portable cell phone detector. The WolfHound Pro PC software collects real-time data from the WolfHound when connected via a USB cable. This data is stored and can be retrieved at any time for the display of statistics or generation of printed reports.

Installation of Software

The software is contained on an SD card.

After installation is complete, run the application. If an error occurs when trying to open the database, please change the properties of the shortcut to run in Windows XP compatibility mode. Also, please run the application as administrator. This will help alleviate any security issues with writing to the database.

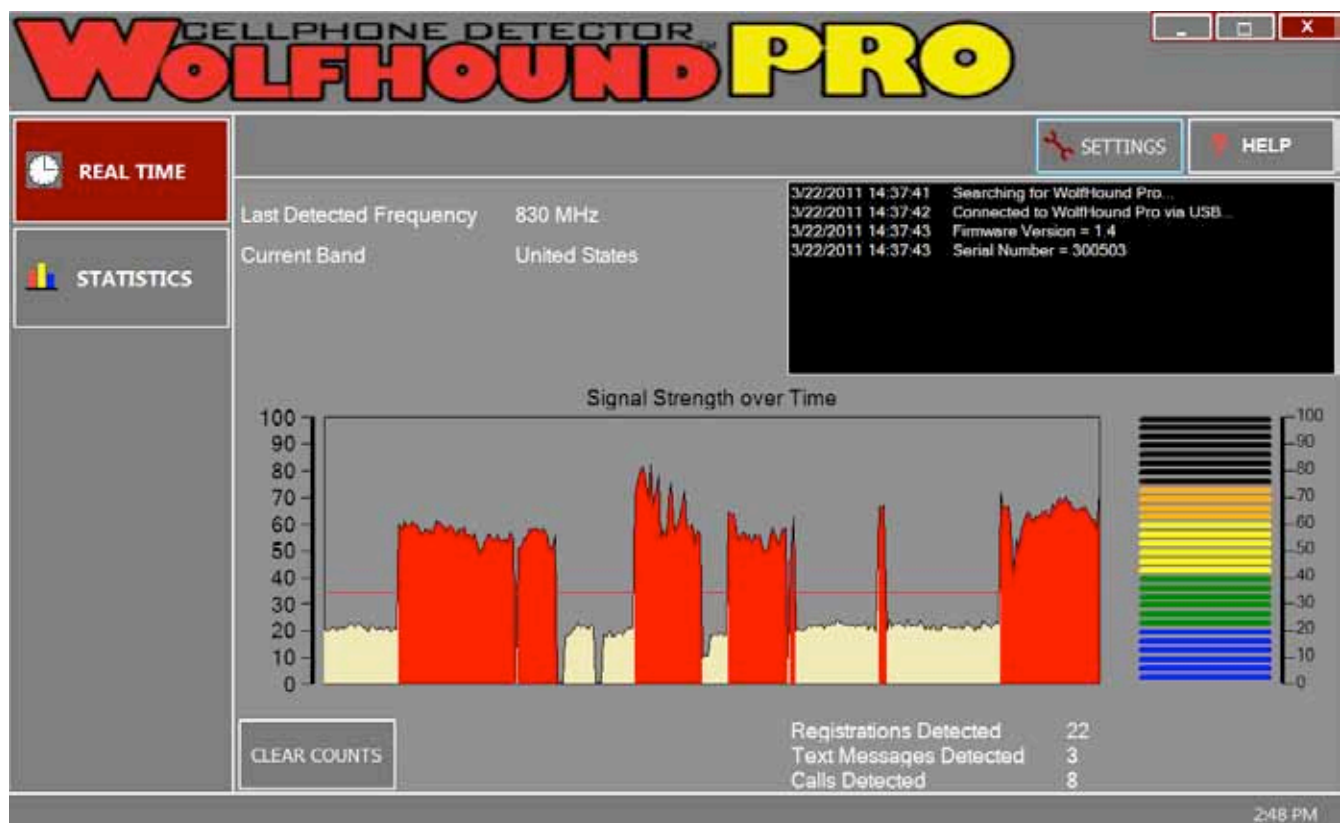

WOLF HOUND PRO DISPLAY AT STARTUP

Getting Started

Connect the provided USB cable to the WolfHound Pro and PC.

Turn on the WolfHound Pro receiver.

Start the WolfHound Pro software.

The status window in the upper-right portion of the screen will display messages.

If connected properly, the firmware version and serial number of the unit will appear as messages.

The real-time display of signal strength will begin to appear.

NOTE: The first time the software is run, the user will be requested to enter a registration code. The registration code is provided along with the software. Type in the registration code to unlock the real-time feature of the application. The software will not ask for this information again.

Quick Tour

The WolfHound Pro has a tab control menu on the left-hand side of the main screen which separates the functionality into main sections. These are:

REAL-TIME – Displays information real-time being collected from the WolfHound Pro

STATISTICS – Allows the user to review stored information in a graphical format and to then be able to print out the information in a report.

The WolfHound Pro also has a menu for Settings and Help along the top edge of the display window.

REAL-TIME

When real-time mode is selected, data currently being collected by the WolfHound Pro is displayed over time. This is displayed in a temporal graph from right to left. There are approximately 5 reports per second. The signal strength is reported between 0 and 100.

When the signal strength goes above the currently set threshold (see SETTINGS) the area under the signal strength will appear red. The area will stay red until the signal strength falls below the threshold again.

When the threshold has been eclipsed, counters will be updated. These counters include:

REGISTRATIONS

TEXT MESSAGES

CALLS

Depending on the length of a threshold incursion, one of these counters will be updated. If it is a short burst, it will simply be a phone registering with the network. Slightly longer would be perhaps a text message. Finally, a lengthy incursion would be an actual phone call.

These counters can be cleared at any time by pressing the “CLEAR COUNTS” button.

There is also a bar to the right of the temporal screen which displays the current reading. The color changes as the level gets higher.

The current band selected is displayed as well as the frequency of the last detection.


STATISTICS

Pressing the statistics button on the left side will display a graph defaulting to cell phone detection for the current date.

There are two selection boxes in order to generate statistics. The leftmost box lets the user determine what type of report is to be run. The default is a general detection report. The rightmost box lets the user determine the time frame in which the data is to be extracted.

Examples of time spans for these reports is “Today”, “This Month”, and “Last Year”. Choose the appropriate time frame to be studied. Data is grouped in time depending on the selection. For instance, in a report that is for a single day, the data is grouped in 5 minute intervals.


These reports may be printed by pressing the “PRINT REPORT” button.

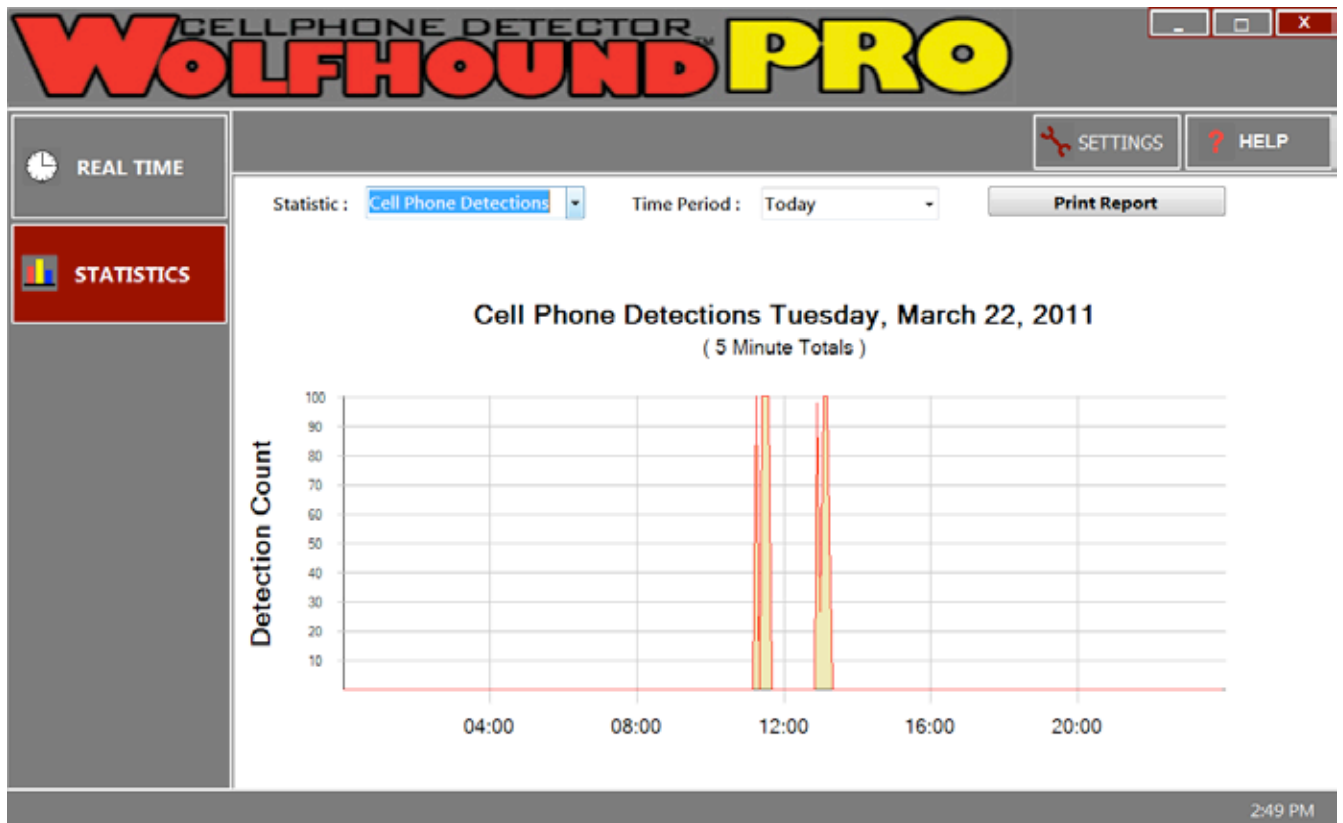


SETTINGS

The settings menu lets the user set the threshold, band, and mute sound. Click on the requested option on the left hand side of the dialog.


The threshold setting allows the user to set a level at which it is determined that a cellphone is in use. Any readings above this level (between 0 and 100) will show the area under it as red in the temporal screen and an audio alarm will sound (unless the sound setting has been set to off).

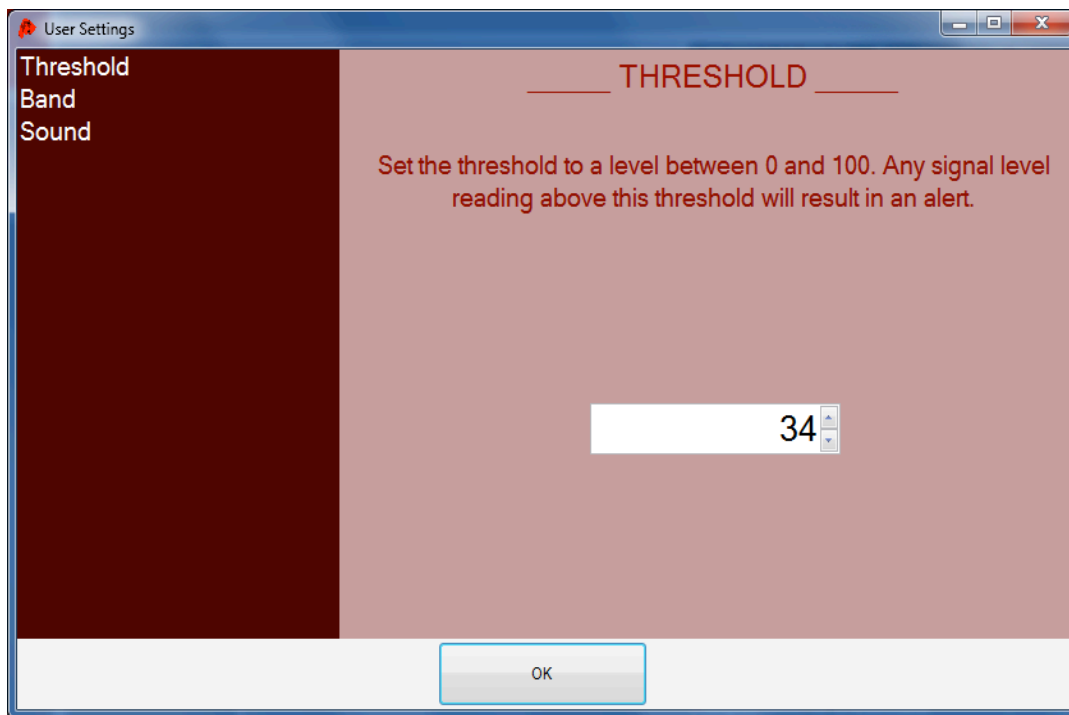

The band settings lets the user select between the United States and European band. Choose the appropriate band for your area.

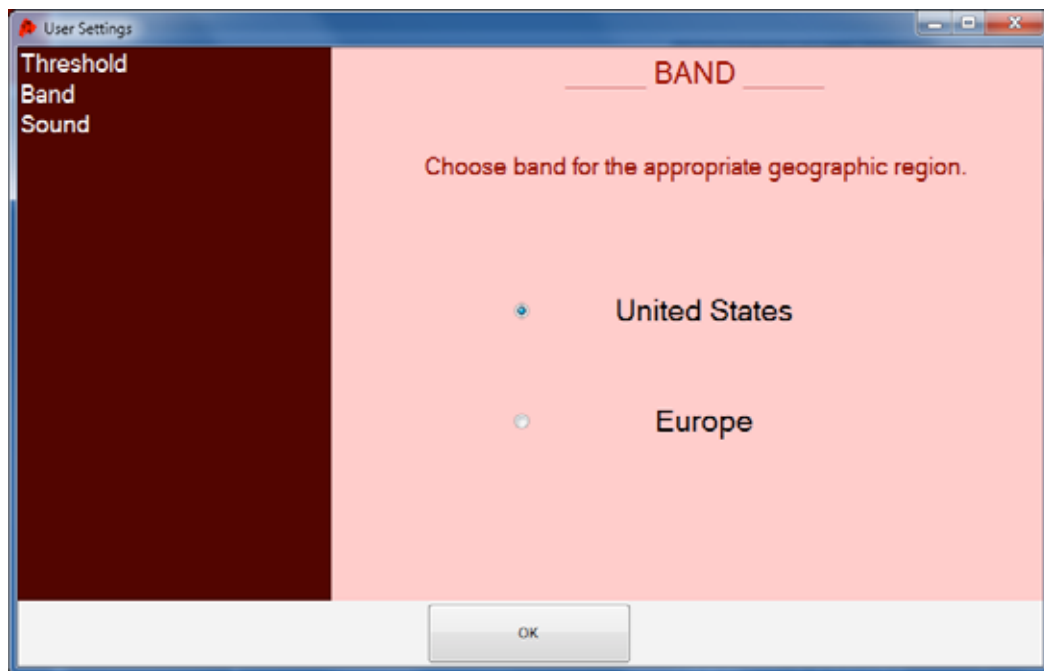

The sound setting lets the user turn the sound alert on or off. Simply make a selection and it will be applied as soon as the dialog has been closed.

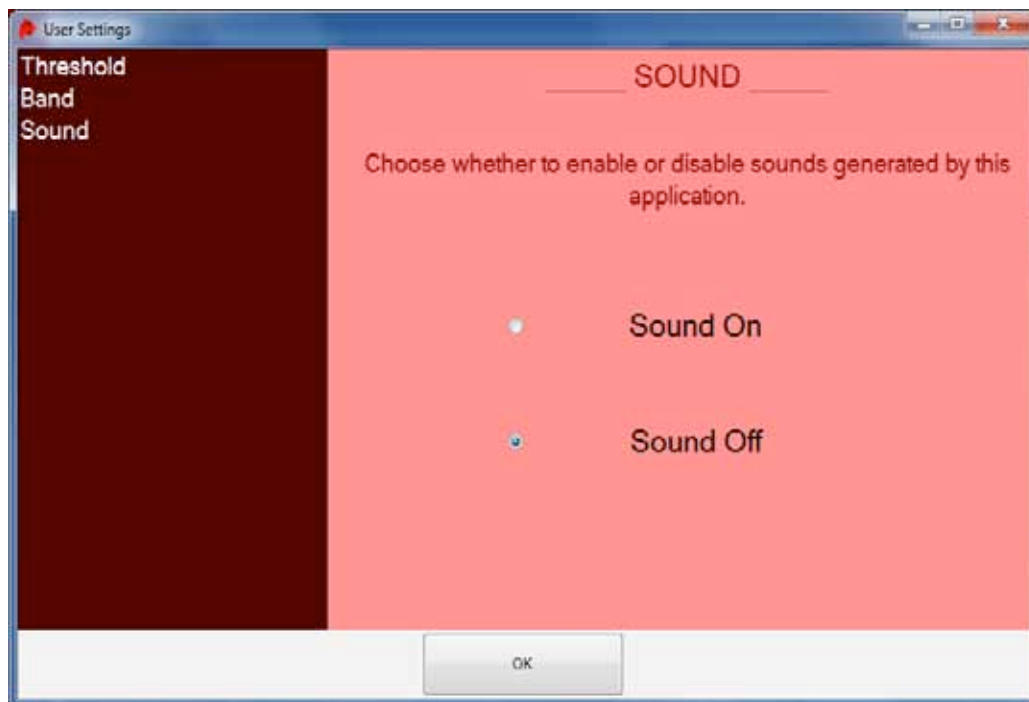

HELP

The help menu shows application information. This includes software version, firmware version (of the hardware) and the serial number of the unit.